

StormWise Installation Guide

(formerly ICPR4)

1. Downloading StormWise:

- Access the latest version and release notes at [Streamline Tech Downloads](#).

StormWise v4.08.03 and ICPR4 v4.07.08 and all other previous versions will no longer access the software. We recommend you uninstall existing versions of the software and install the latest versions containing the new license manager.

2. Installation Process:

- Open your firewall to streamline.softwarekey.com ports 80 (HTTP) and 443 (HTTPS)
- Run the setup.exe file and agree to all prompts, including "Slim DX" if it appears.

3. Internet Connection:

- An active internet connection is required for program authentication and use.

4. First-Time Authorization:

- Enter your License Number and Password the first time you open the program.

